



# SPREADER LIGHT 12

## FLUSH MOUNT

### Spreader Light 12 - Flush Mount Fitting Instructions

1. Determine location of lights
2. Using template below mark and cut recess area and drill mounting holes ( 1/8 drill bit).
3. Using a hand screwdriver and screws provided fix lights to vessel **HAND TIGHTEN ONLY**
4. If not using screws provided please ensure countersink fixing sits flush into housing to ensure correct fitting of bezel

(Fuse size will be determined by number of lights - allow 2.5 amps per light @ 12 Volts DC)  
2 year warranty see website for details.

